



How to Open the Rocketfish RF-WHTIB-A Sender

Prerequisite Only This guide will assist Rocketfish RF-WHTIB-A users in opening their sender device.

Written By: Caitlin Charlton



INTRODUCTION

Most problems with the Rocketfish RF-WHTIB-A sender require opening up the device. This guide will show users how to successfully open up their device.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — How to Open the Rocketfish RF-WHTIB-A Sender



- Remove the four rubber tabs from the bottom of the sender.
- ❗ Pull hard to peel off the rubber tabs, as they are attached with adhesive.

Step 2



- Use a Phillips #1 screwdriver to unscrew the four 12 mm screws on the bottom of the device.

Step 3



- Flip the device over and remove the top casing from the sender.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 12:08:39 PM.